



## RATCHET STRAPS FOR HEAVIER LOADS


Our ratchet straps are equipped with powerful ratchets and in the assortment we have smaller ratchets from 800 kg to the larger ones that have a lashing capacity of 4000 kg. They are available both as endless version and with hooks at the ends.



### FUNCTION FASTY RATCHET STRAPS



1 Place the ratchet strap around the load. Protect the strap against sharp corners with edge protection.

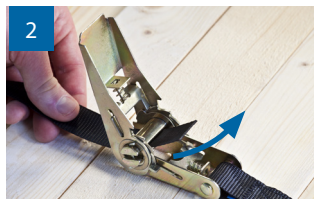

2 Feed in the loose strap end in the axle's slot. Pull through the strap until it is tight, without being tensed.



3 Winch the handle back and forth until the desired lashing strength is achieved.



4 The strap should then be rolled at least 1.5-2 turns around the axle.



5 Push the handle down into rest position when the load is lashed to the desired tension.



6 To release the strap ratchet, pull the latch with your fingers.



7 Push down the handle completely backwards in order to release the axle's rotation lock.



8 In this position the strap can easily be pulled out and the axle is released and rotates.



Art. 180 FASTY RATCHET STRAP

1 pce endless, W=25 mm, L=500 cm, 800 kg. Black



Art. 182 FASTY RATCHET STRAP

1 pce with hooks, W=25 mm, 2-parts (L=30 + 470 cm), 800 kg. Black



Art. 186 FASTY RATCHET STRAP

1 pce endless, W=25 mm, L=500 cm, 100 kg. Blue



Art. 187 FASTY RATCHET STRAP

1 pce with hooks, W=25 mm, 2-parts (L=30 cm + 470 cm), 1000 kg. Blue



Art. 188 FASTY RATCHET STRAP

1 pce with hooks, W=35 mm, 2-parts (L=50 cm + 450 cm), 2500 kg. Orange



Art. 189 FASTY RATCHET STRAP

1 pce with hooks, W= 50 mm, 2-parts (L=50 cm + 950 cm), 4000 kg. Orange

Art no. 0180-0187 are delivered in plastic bag with header card and art no. 0188-0189 are delivered in shrink plastic with sticker.

Scan the QR code with your smartphone and watch the demo film on how to use the FASTY ratchet straps.

